





INSTALLATION INSTRUCTIONS FOR THE VALENTINE ONE RADAR DETECTOR

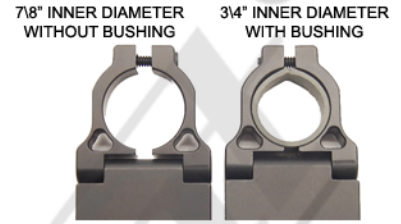

1 - Remove the two suction cups that are on your existing V1 windshield mount. The two holes that were used to secure the suction cups are now used to attach the BlendMount.

2 - Remove the lock washer and nut from the button head screws and place the BlendMount assembly onto the V1 windshield mount. Re-attach the lock washer and nut and tighten with the supplied allen wrench.

3 - This mount was designed to fit rear view mirror stems that are 7/8" or 3/4" in diameter. If the mount is too big to clamp onto your RVM stem, wrap the supplied bushing material (1/16" x 3/8" x 2-1/2") around the stem before tightening the mount. This will reduce the inner diameter of the mount to 3/4".

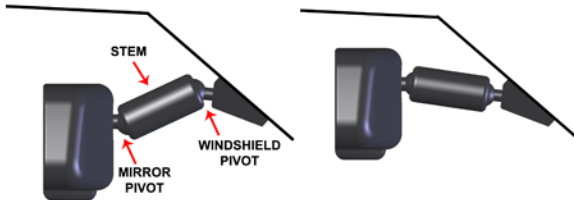

5 - Most compatible mirrors have a stem between the mirror and the windshield that has a pivot on both ends. We recommend that you try moving the mirror upward to minimize any viewing obstruction of the mirror and radar detector. Grab the mirror and move the stem upward using the windshield pivot only. Adjust the mirror to your normal viewing position using the mirror pivot only. Notice the higher location of the mirror as shown above.




4 - Install this mount from the passenger side of the vehicle. Remove the right half of the mount by removing the two socket head cap screws. Be aware that there is a small lock washer on the lower screw. With the left half of the mount still attached, position the mount around the mirror stem as shown above.

5 - Reattach the right side of the mount. Make sure the small lock washer is still on the lower screw and tighten until the screw is fairly snug. Leave the top screw loose so the mount can slide along the mirror stem to the desired location.



7 - Install the V1 onto the mount. Make the necessary adjustments as shown in fig. 8. We recommend you adjust the V1 so it is as close to the bottom of the mirror as possible. Using the vertical adjustment, adjust upward as far as possible while making sure the V1 can still be removed without hitting the bottom of the mirror. After all adjustments are made, be sure to check that the hinge pivot and vertical adjustment screws are tight. The screw on the very top of the mount should be tightened last. Grab the long arm of the allen wrench to assure that these screws are securely tightened as shown above.

8 - BLENDMOUNT ADJUSTMENTS

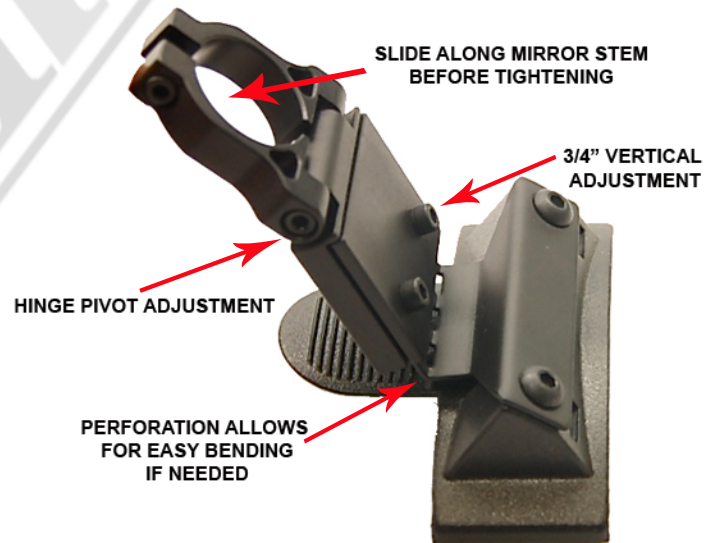

CAUTION

DO NOT use this mount if it interferes with the adjustability or the operation of your rear view mirror in any way.

DO NOT use this mount if the radar detector creates an unsafe viewing obstruction.

DO NOT ATTEMPT TO MODIFY THIS PRODUCT. Consult the manufacturer for assistance.

All BlendMount products are accompanied with detailed installation instructions and adjustment tips. You are encouraged to contact customerservice@blendmount.com or call J28 Design at 1-707-664-8234 for further assistance.

Check the BlendMount Forum for installation tips and some vehicle specific installs.

Your feedback is very important to us. Please email any questions or comments you have to customerservice@blendmount.com

www.blendmount.com

